



WRP400 Wireless-G Broadband Router with 2 Phone Ports

Package Contents

- Wireless-G Broadband Router with 2 Phone Ports
- Setup CD-ROM
- Documentation on CD-ROM
- Ethernet Network Cable
- Power Adapter

Welcome

Thank you for choosing the WRP400 Wireless-G Broadband Router. The WRP400 is a networking solution that combines telephone, wireless, and wired capabilities.




This guide describes how to physically install your WRP400 and how to set up a basic configuration by using the Setup Wizard.






1

Getting to Know the WRP400

Front Panel







	USB: For information about compatible USB devices, see www.cisco.com/en/US/products/ps10028/index.html
	Wi-Fi Protected Setup (White/Orange): Can be used to automatically configure wireless security for client devices that support Wi-Fi Protected Setup. The button shines white while wireless security is enabled. It shines steady orange if there is an error during the Wi-Fi Protected Setup process.
 POWER	Power (Green/Red/Orange): Indicates the status of the following: Power: The LED shines steady green and stays on while the router is powered on. If the LED shines steady red, verify that the correct power adapter is used. If the LED remains red, contact your service provider for support. Self-diagnostic test: During boot-up, the Power LED flashes green to indicate that the self-diagnostic test is in progress. When the test is complete, the LED shines steady green. Initialization of a USB modem: The Power LED flashes green and orange when initialization is in progress. After the device initializes, the LED shines steady green. If the device fails to initialize, the LED continues to flash green and orange.

 POWER	<p>Mobile network connection: If a compatible USB modem is installed, the mobile network connection is used as a failover when an Ethernet connection is unavailable. The Power LED indicates the status of the mobile network connection:</p> <ul style="list-style-type: none"> • Steady Green: The mobile network connection is not in use. • Flashing Orange: The WRP400 is attempting to connect to the Internet through the mobile network connection. • Steady Orange: The WRP400 is connected to the Internet through the mobile network connection. • Continuous Flashing Orange: The WRP400 failed to connect to the Internet through the mobile network connection and is trying again.
 PHONE	<p>Phone 1-2 (Green): The LED shines steadily when an active line is registered to the corresponding phone port. The LED slowly flashes when voicemail messages are waiting.</p>
 WIRELESS	<p>Wireless (Green): The LED shines steadily when the wireless feature is enabled. It flashes when the router is actively sending or receiving data over the wireless network.</p>
 ETHERNET	<p>Ethernet 1-4 (Green): The LED shines steadily to show that a device is connected through the corresponding port. It flashes to indicate network activity over that port.</p>
 INTERNET	<p>Internet (Green): This LED shines steadily when an Internet connection is made through the Internet port. It flashes to indicate network activity over the Internet port.</p>

Back Panel



	<p>Internet: Use this port to connect the WRP400 to a cable or DSL Internet connection.</p>
	<p>Phone 1-2: Use these ports to connect standard analog telephones to the router.</p>
	<p>Ethernet 1, 2, 3, 4: Use these Ethernet ports to connect the router to wired computers and other Ethernet network devices.</p>
	<p>Power: Use the power port to connect the power adapter.</p>

Side Panel



Reset: To restore the router's factory defaults, press and hold the Reset button for approximately ten seconds.

Stand: To place the router in a vertical position, rotate the stand 90 degrees.

2


 
Installing the WRP400

There are three ways to place the WRP400:

- **Horizontal Placement:** The router has four rubber feet on the bottom panel. Place the Router on a level surface near an electrical outlet.
- **Vertical Placement:** The Router has a stand on the side panel opposite to the antenna. Rotate the stand 90 degrees, and place the Router on a level surface near an electrical outlet.



- **Wall-Mounting Placement:** The Router has four wall-mount slots on its back panel. To mount the router on a wall, follow these instructions:
 - Choose a wall that is smooth, flat, dry, and sturdy. Make sure that an electrical outlet is nearby.
 - Obtain mounting hardware. Suggested hardware is illustrated below (not true to scale).

		2.5-3.0 mm
4-5 mm	1-1.5 mm	

- Drill two holes, 6 cm (about 2-23/64 in.) apart. Insert a screw into each hole and leave 3 mm (about 1/8 in.) of the head exposed.
- Position the router so that two of the wall-mount slots are over the two screws. Slide the Router down until the screws fit snugly into the wall-mount slots.

3

Connecting and Configuring the WRP400

Complete the initial configuration by using the Setup Wizard.

STEP 1 Insert the Setup CD-ROM into your CD-ROM drive.

